


Volumenrohr Tower Heater

TH6-VR, TH9-VR, TH12-VR

Montageanleitung
Instructions of installation

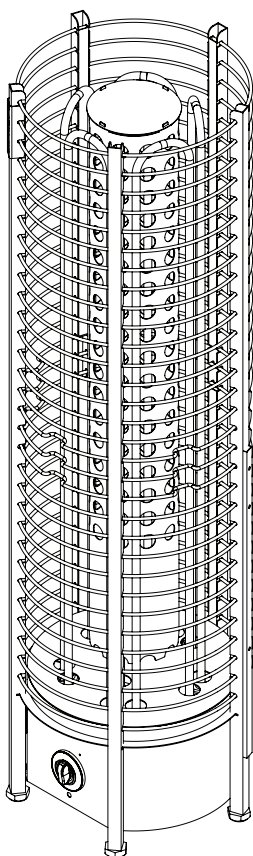

DE

EN

1. DEUTSCH

1.1. Montage Volumenrohr


Führen Sie folgende Schritte durch, bevor Sie den Tower Heater mit Steine befüllen.

1.2. Vorbereiten des Saunaofens


1. Stellen Sie sicher, dass der Saunaofen zur Gänze ausgekühlt ist.

1.3. Montage Voumenrohr


1. Legen Sie 1 - 2 Lagen Saunasteine zwischen die Heizstäbe des Tower Heaters, um die Heizstäbe gerade auszurichten und zu fixieren.
2. **Beachten Sie, dass sich die Heizstäbe NICHT gegenseitig berühren.**
3. Setzen Sie das Rohr über die mittleren Heizstäbe, sodass dieses sicher steht.
4. Kontrollieren Sie noch einmal, dass sich die Heizstäbe NICHT gegenseitig berühren.
5. Das Aufschichten der Steine muss behutsam durchgeführt werden. Die Steine sollten so angeordnet werden, dass der Abstand zwischen dem Volumenrohr und dem Rahmen über die gesamte Höhe des Saunaofens vollständig mit Steinen gefüllt ist. Die Steine dürfen nicht zu dicht aufgeschichtet werden. Es muss genug Raum zwischen den Steinen verbleiben, damit die Luft zirkulieren kann.
6. Bedecken Sie das Volumenrohr ebenfalls mit Saunasteinen.

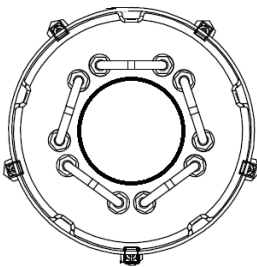

TH-6

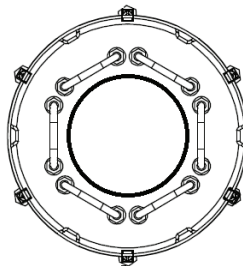

TH-9

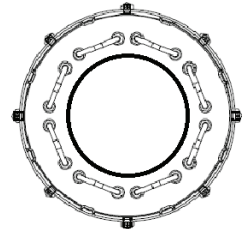

TH-12

2. ENGLISH

2.1. Installation of the stainless steel tube

Please take the following points into account, before you are piling the stones.


2.2. Preparing the sauna heater

1. Make sure that the sauna heater has completely cooled down.


2.3. Installation of the stainless steel tube

1. Place one or two layers of sauna stones between the heating elements to align and fix them.
2. **Make sure that the heating elements do NOT touch each other.**
3. Put the tube over the center heating elements, so that it stands safe.
4. Check again that the heating elements do NOT touch each other.
5. Piling the stones should be done with care. The stones should be placed so that the gap between the tube and the frame of the heater is completely filled with stones for the whole height of the heater. The stones should not be placed too tightly together; instead there should be enough space between the stones to allow air to flow.
6. Also cover the tube with sauna stones.


EN

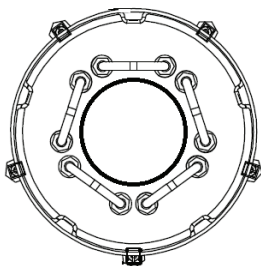

TH-6

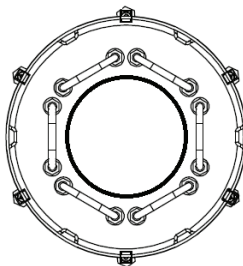

TH-9

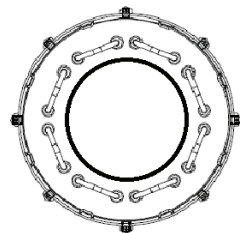

TH-12



WORLD OF WELLNESS

sentiotec GmbH world of wellness Oberregauer Straße 48 4844 Regau, Austria

T +43 (0) 7672/277 20-800 F +43 (0) 7672/277 20-801

E info@sentiotec.com www.sentiotec.com